

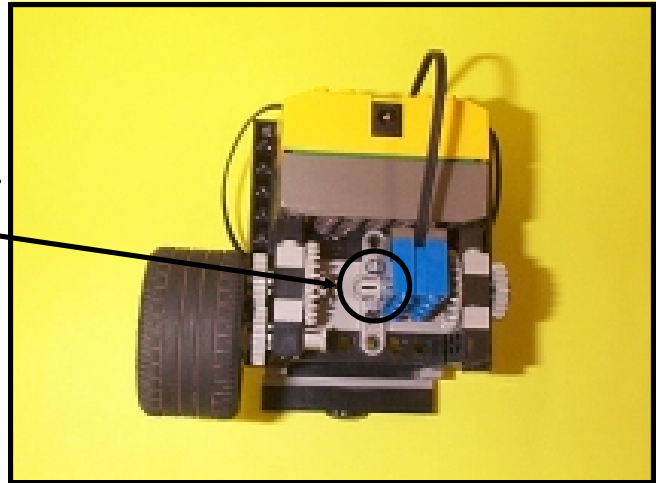


4

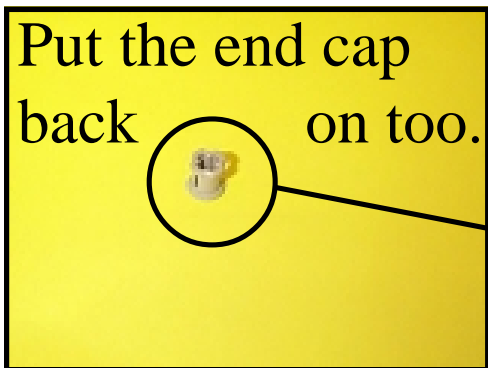


Now put the wheel back on.

5

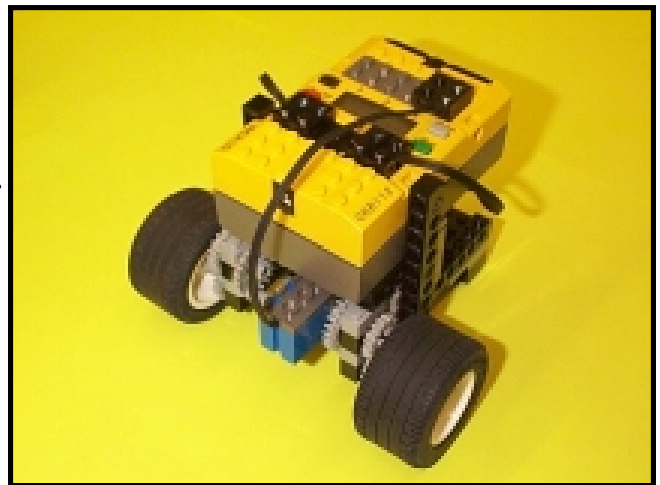

4

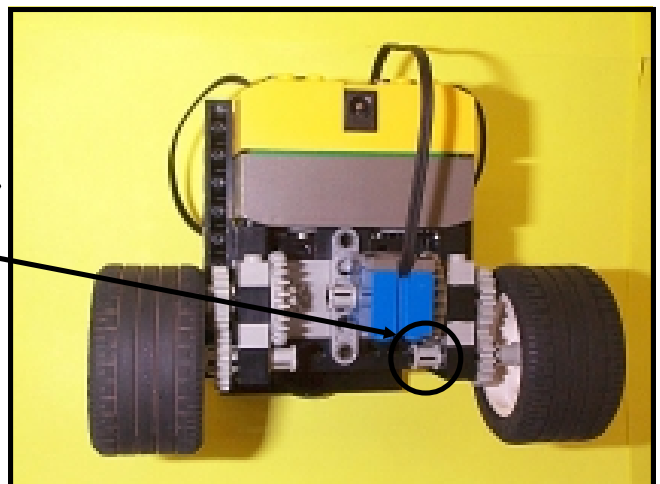

FIRST Place Scooter

Rotation Sensor Addition

Remove the right wheel and the gears and axle on that side.

